

Features



RGB+CCT 16 Millions of colors to choose



Color temperature 2700K~6500K



Dimmable Saturation control



2.4G RF wireless transmission technology



Signal transmitting & Modes synchronization



Remote control Control distance 30m



Smartphone APP control (2.4GHz gateway is needed)



Support third party voice control (2.4GHz gateway is needed)



DMX512 controllable (DMX512 transmitter is needed)

Parameters

Model No : FUT014 CRI: >80 Power: 6W PF: >0.5

Voltage: AC100~240V Lifespan: 50000h Frequency: 50/60Hz Beam Angle: 220° Color Temp.: 2700K~6500K RF: 2.4GHz

Light Efficiency: 70 LM/W Control Distance: 30m Luminous Flux: 280LM

Base Type: E26/E27/B22



Link/Unlink

Compatible with these remote controls (Purchased separately)







LED bulb can be working after linking with remote controller or DMX512 transmitter; for more details, please read the remote controller or DMX512 transmitter instruction



Model No : FUT014

 
DMX512 LED Transmitter Link/Unlink

Compatible with DMX512 LED Transmitter (Purchased separately)

1 Choose the zone for the controller by pressing '+' or '-' (e.g. 'CH12' means zone 12)




seconds switch on again





 The bulb blink slowly 3 times, means the linking is done successfully



press " @ " 3 times within 3 seconds

 
When the bulb pilot lamp is on, short press " @ " 5 times within 3 seconds

The bulb blink quickly 10 times, means the unlinking is done successfully



If the link or unlink failed, please follow the above steps again.

DMX512 LED Transmitter Connection Diagram



Dynamic Mode Sheet


Number	Dynamic Mode	Brightness / Saturation / Speed
1	Mardi Gras	
2	Automatic color change	
3	Sam	
4	Gemstone	
5	Twilight	Adjustable
6	American	
7	Fat Tuesday	
8	Party	
9	Slow Color Splash	

Signal transmitting

One bulb can transmit the signals from the remote control to another bulb within 30m, as long as there is a bulb within 30m, the remote control distance can be limitless.

Modes synchronization

 Different bulb can work synchronously when they are started at different times, controlled by the same remote, under same dynamic mode and within 30m distance.



Attention

- 1. Make sure the voltage is between AC100~240V.
- 2. When install the light, pls switch off the power to make sure the safty.
- The working power is high voltage alternating current, so it must be far away from people and must with ground connection.
- 4. Avoid using under high temperature or moisture.



Made in China